

GDS Standard v2 Controller Quick Reference Guide (helpsheet 143)

Firmware v A.O. 1806



World Leaders in Computer Controlled Testing Systems for Geotechnical Engineers and Geologists

CMD Menu

COMMAND MENU

0 SYSTEM MENU

3 FAST EMPTY

4 TARGET VOLUME

5 ZERO VOL. READING

6 FAST FILL

**7 TARGET PRESSURE
(ON SCREEN 1/2)**

**SET FLOW RATE
(ON SCREEN 2/2)**

8 APPLY PR. OFFSET

9 REMOVE PR. OFFSET

KEYPAD MENU

9 REMOVE OFFSETS

8 APPLY OFFSET

**7 SET VOL/PRESSURE/
FLOW RATE**

6 FAST FILL

5 SLOW FILL

4 SET MAX LIMITS

3 FAST EMPTY

2 SLOW EMPTY

1 SET MIN. LIMITS

**./- LOCK/UNLOCK
KEYPAD**

(MENU) SYSTEM MENU

RESET MENU

LOCK/UNLOCK

LIMITS MENU

DIAGNOSTICS

SYSTEM
CALIBRATION

EVENT LOG

DISPLAY SETUP

ABOUT...

(MENU) OFFSETS MENU

APPLY PR. OFFSET

REMOVE PR. OFFSET

UNDO PR. OFFSET

REDO PR. OFFSET

ZERO VOL. READING

DIAGNOSTICS MENU

A/D CONVERSION

COMMS INFO

DEVICE INFO

SMARTKEYPAD
INFO