

GDS Enterprise Level Controller Quick Reference Guide (helpsheet 144)

Firmware v B.5



*World Leaders in Computer Controlled Testing
Systems for Geotechnical Engineers and Geologists*

CMD Menu

COMMAND MENU (CMD)

- 0 SYSTEM MENU**
- 3 FAST EMPTY
- 4 TARGET VOLUME
- 5 ZERO VOL. READING
- 6 FAST FILL
- 7 TARGET PRESSURE
- 8 APPLY PR. OFFSET
- 9 REMOVE PR. OFFSET
- ./- LOCK/UNLOCK
KEYPAD

KEYPAD MENU

- 9 REMOVE PR OFFSET
- 8 APPLY OFFSET
- 7 SET VOL/PR. MODE
- 6 FAST FILL
- 5 SLOW FILL
- 4 SET MAX LIMITS
- 3 FAST EMPTY
- 2 SLOW EMPTY
- 1 SET MIN. LIMITS

(MENU) SYSTEM MENU

- RESET MENU
- LOCK/UNLOCK
- LIMITS MENU
- DIAGNOSTICS
- SYSTEM
CALIBRATION
- EVENT LOG
- SCREEN SAVER
- ABOUT...

(MENU) OFFSETS MENU

- APPLY PR. OFFSET
- REMOVE PR. OFFSET
- ZERO VOL. READING

DIAGNOSTICS MENU

- A/D CONVERSION
- COMMS INFO
- DEVICE INFO
- SMARTKEYPAD
INFO