


149 Helpsheet

World Leaders in Computer Controlled Testing
Systems for Geotechnical Engineers and Geologists


Hardware – IEEE USB card - Steps to enable NI488 devices

This Helpsheet describes how to enable legacy NI488 devices on a newly installed Agilent IEEE to USB converter card.

First, install the Agilent software from the driver CD supplied with the USB IEE card. Open the Agilent Connection Expert Program which can be found in the system tray or by following **Start>Programmes>Agilent IO Libraries Suite>Agilent Connection Expert**.

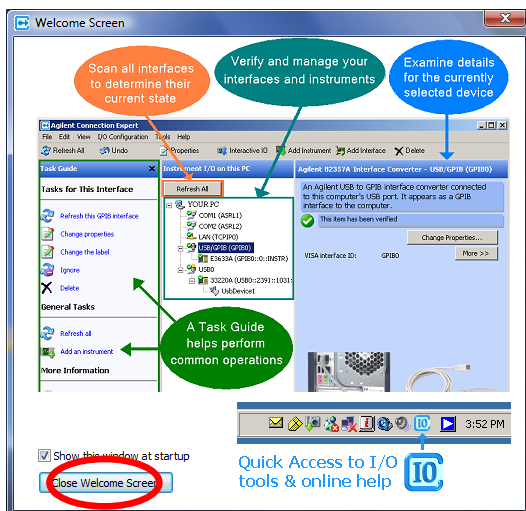


The welcome screen shown here will then appear. Close it by clicking the close button highlighted.

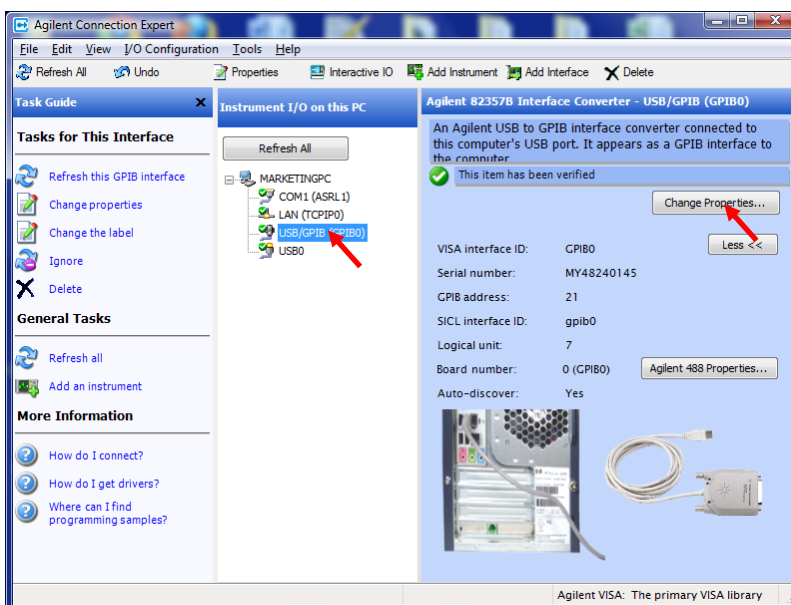


Select the **USB/GPIB** device shown on the left. Then click the '**Change Properties**' button.


In the new window that opens click '**Agilent 488 Properties...**'

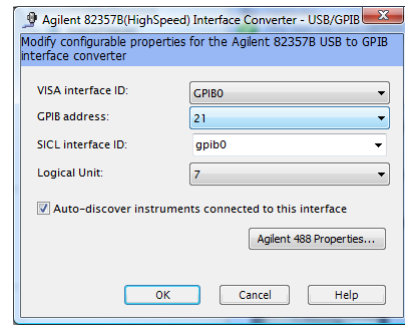

In the Agilent 488 Properties window that opens click '**Enable Agilent 488**'

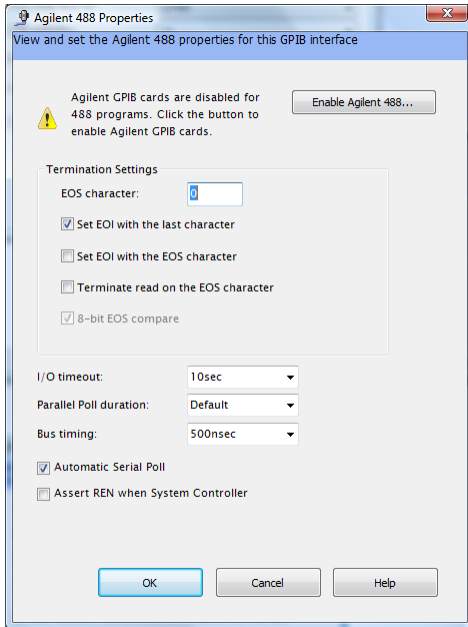

In the final window that pops up check the box to '**Enable Agilent GPIB cards for 488 Programs**'.

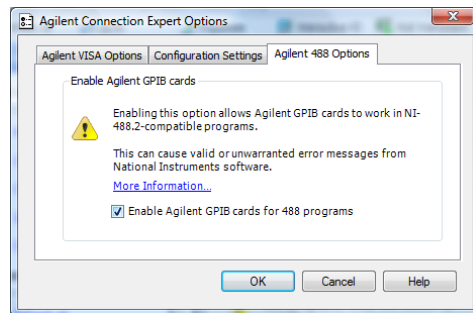

Close all the open windows. Your IEEE card should now work correctly with GDS IEEE products.